

Model 0390-R



EZFILL™ REMOTE CONTROL

REMOTE CONTROL FOR ALL MODELS
0390-(n) AND 0391-(n) AUTOMATIC
VANITY MOUNTED SOAP DISPENSERS

INSTALLATION AND MAINTENANCE GUIDE

OPERATION

If desired, use the remote control to adjust the soap dispenser settings. Hold the remote control straight in front of the sensor at a distance of about 4-6" (10-15cm).

User Hint: Holding the soap dispenser remote control out of the recommended range (too close or too far) may interfere with the remote's activation.

Choose the function you want to adjust by pressing on the function button as follows:*

1- SOAP VOLUME

The 1-4 drop keys allow the owner to control the desired soap dispense volume.



.004 to .013 oz
(0.2 to 0.4 ml)



.023 to .030 oz
(0.7 to 0.9 ml)



.041 to .054 oz
(1.2 to 1.6 ml)



.071 to .078 oz
(2.1 to 2.3 ml)

Confirmation: continuous blink of the red light in the sensor eye.

*The exact soap dispense volume depends on the soap viscosity. Factory setting is 0.03 oz (0.8 ml).

2- ADJ

This function allows reverting to soap dispense volume factory setting.

Confirmation: 2 blinks of the red light in the sensor eye.

3- TEMPORARY OFF FUNCTIONS

This function is ideal to perform any kind of activity in front of the sensor without operating the system (for example, cleaning). The soap dispenser will remain off for one (1) minute when this button is pressed once.

To cancel this function and to return to normal operation press the On/Off button again or wait one (1) minute.

Confirmation: OFF – 2 fast blinks, ON – 4 fast blinks

4- STARTING SOAP LINE AFTER REFILLING SOAP TANK

Once the soap tank has been filled \ re-filled, press the FILL button. The pump will run for one (1) minute to allow the soap to start coming out of the soap dispenser spout.

To stop this activity press the FILL button again. If the soap has not started coming out of the spout, check for leaks and / or kinked or blocked or disconnected tubing. If all ok, then press the FILL button again.

Repeat as necessary.

