



AMERICAN SPECIALTIES, INC.
441 Saw Mill River Road, Yonkers, NY 10701
(914) 476.9000 • (914) 476.0688
www.americanspecialties.com

MODEL №: 0952

ISSUED: 01-87

REVISED: 15 APR 2019

RECESS MOUNTED MEDICINE CABINET WITH MIRRORED SWING DOOR

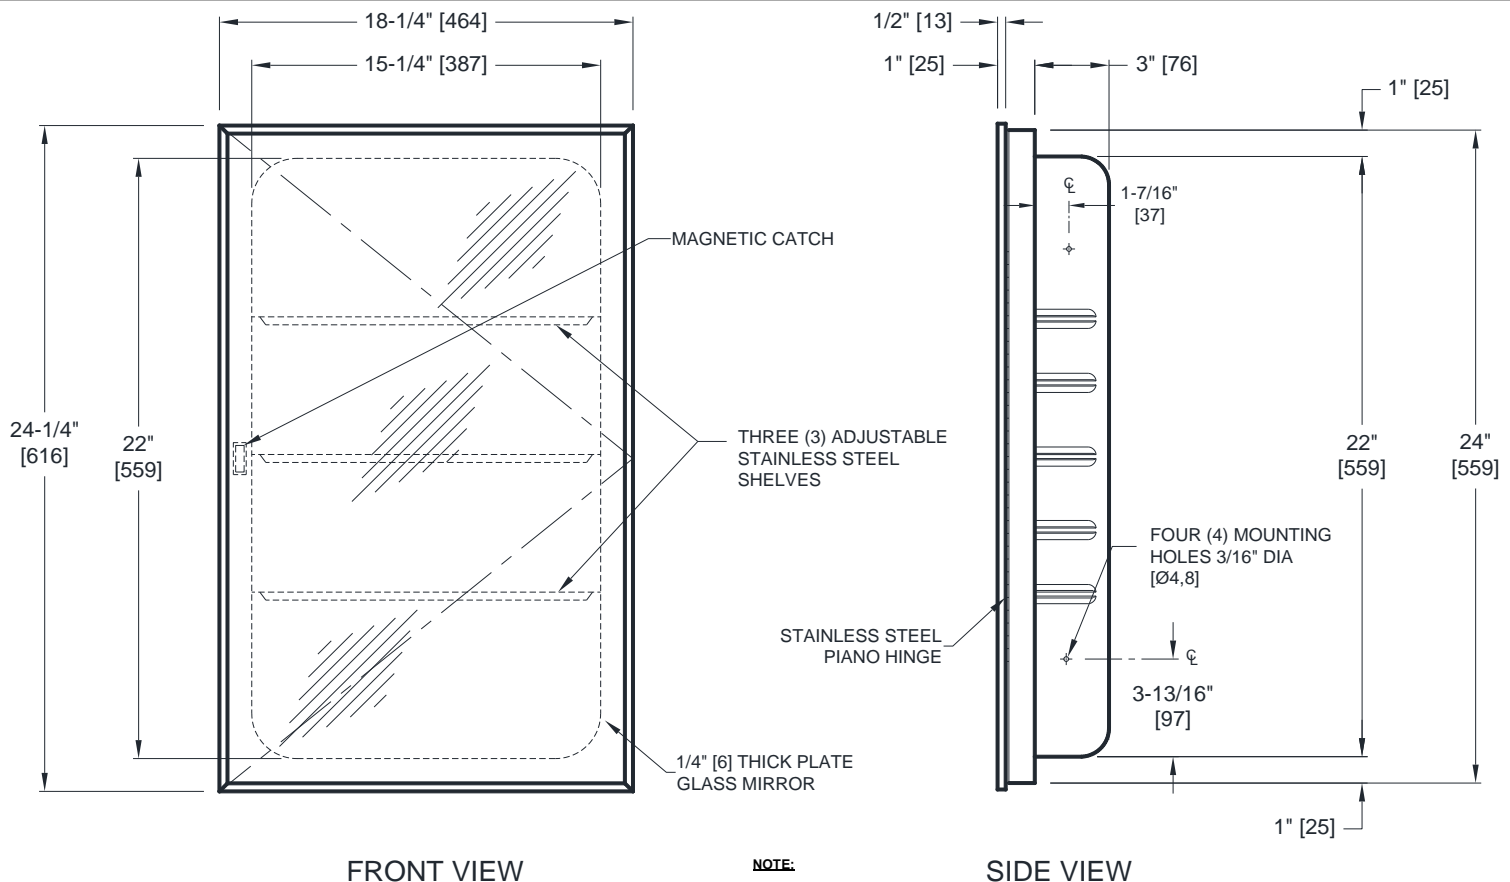


ILLUSTRATION FOR REF ONLY AND NTS

FOR CLEANING INSTRUCTIONS SEE APPROPRIATE SECTIONS IN
PRODUCT CARE & MAINTENANCE
BULLETIN (PCM) ON ASI WEBSITE

SPECIFICATION

Recess Mounted Medicine Cabinet with Mirrored Swing Door shall have channel frame door and cabinet fabricated of 22 gauge stainless steel type 304 alloy 18-8. Cabinet interior shall have radius corners and shall be provided with three (3) removable stainless steel shelves. Interior face trim shall be one-piece construction with no miters and no exposed fasteners or welded seams. Mirror glazing shall be N° 1 quality 1/4" [6] thick polished float/plate glass and shall be warranted for fifteen (15) years against silver spoilage. Stainless steel door channel shall be hung on full length 3/16" diameter [Ø4,7] heavy duty stainless steel multi-staked piano hinge and shall be held closed by a magnetic. Cabinet shall have two (2) rubber door silencers. Cabinet can be right-handed swing door or left-handed swing door determined by the installation.

Recess Mounted Medicine Cabinet with Mirrored Swing Door shall be Model № 0952 of American Specialties, Inc., 441 Saw Mill River Road, Yonkers, New York 10701-4913

INSTALLATION

Unit is mounted in wall recess using four (4) № 10 pan head self-threading screws (by others) through concealed mounting holes provided in cabinet sides. For general utility mount unit 46" [1168] above finished floor (AFF) to bottom of unit or 12" [305] above wash basin. For compliance with ADA Accessibility Standards install unit so that bottom edge of mirror is 40" [1016] MAX AFF. Note that bottom edge of reflecting surface is 3/4" [19] below rough wall opening (RWO).

Rough Wall Opening (RWO) required is 16" [406] W x 22-3/4" [578] H x 3-1/2" [89] D minimum

OPERATION

Pull the door to access contents and manually pushes door to engage magnetic catch that holds door shut. Shelf spacing may be adjusted by removing shelves and inserting in any of five (5) internally embossed tracks on each side of cabinet interior.